

Cleaning your rangehood

IMPORTANT: BEFORE CLEANING, ALWAYS ENSURE THAT YOU HAVE SWITCHED YOUR RANGEHOOD OFF AT THE OMNI-POLAR SWITCH, SET AT THE WALL FROM THE CABLE.

- Clean the external parts of your rangehood with mild liquid detergent and a new damp cloth.
- Never use abrasive powder, corrosive solvents or brushes.
- Never insert pointed objects into the motor's protective grid
- Only clean the control panel and grease filter grill with mild liquid detergents and a new damp cloth.
- If you are using the appliance in recirculation mode, then be sure to replace the charcoal filters at the recommended interval (see section on "Fitting the charcoal filter" on page 10). A build up of grease could cause a fire hazard.
- Never attempt to clean the area above the grease filter.

The Grease filter

- Your rangehood includes a grease filter which helps to absorb grease particles to protect your kitchen and furniture from greasy residues.
- These metallic filters may become flammable if it becomes saturated with greasy residue.
- To prevent this fire hazard, the grease filter should be cleaned regularly. Depending on use, this should be done every 10 – 15 days or at least once a month, using hot water and normal washing-up detergent.

IMPORTANT: DO NOT WASH THE GREASE FILTERS IN A DISHWASHERBECAUSE WHILE THEY ARE DISHAWASHER SAFE, CHEMICALS FROM DISHWASHING DETERGENT CAN CAUSE DAMAGE.


Maintenance

- **Removing and cleaning the grease filter**

Grease Filter part no. SYRSF68521 for GPP52L

Grease Filter part no. SYRSF68751 for GPP75L

- Remove the grease filter by sliding the securing nibs at the sides of the grille on the underside of the rangehood.
- Soak the grease filter in hot water mixed with mild liquid dish detergent for about an hour.


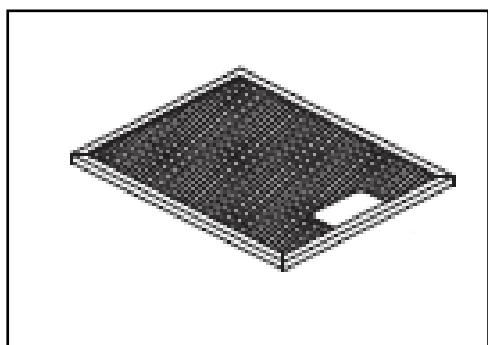


- Rinse it off thoroughly with hot water.
- Repeat the process if required.
- Refit the grease filters once they have dried.

IMPORTANT:

- Let the grease filter dry thoroughly before refitting it in the rangehood.
- Never attempt to use your rangehood without the grease filter in place.

- **Light replacement (Part number: 14000600420 – LED LIGHT)**

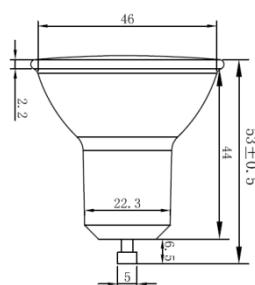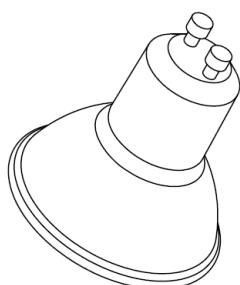

IMPORTANT: BEFORE ATTEMPTING TO CHANGE A LIGHT BULB, YOU MUST ENSURE THAT YOU HAVE DISCONNECTED THE RANGEHOOD FROM YOUR MAINS SUPPLY.